


LACTOENOS™ RANGE INOCULATION

LACTOENOS™ DIRECT

DIRECT INOCULATION

Direct

Take out the sachet 30 minutes before inoculation

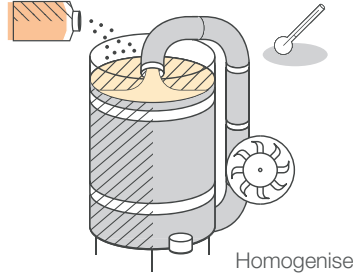


- Early co-inoculation
24 - 48 h after start of AF.
(16 - 30°C / 60 - 86°F)
- Late co-inoculation
1.010 density (<26°C / <78°F).
- Sequential inoculation
After AF, on running off
(20°C - 22°C / 68 - 71°F).
- Curative inoculation
(20°C - 22°C / 68 - 71°F).

LACTOENOS™ PREAC


INOCULATION WITH ACCLIMATISATION

EARLY CO-INOCULATION

Preparation step

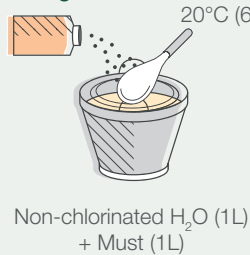
PreAc +
Energizer

30 minutes

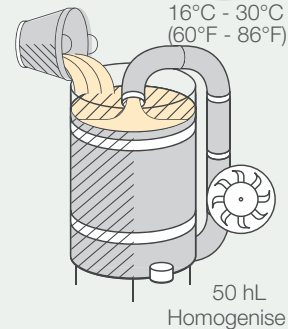


LATE CO-INOCULATION or SEQUENTIAL INOCULATION

Acclimatising phase

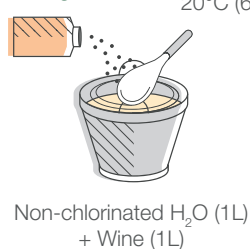PreAc +
Energizer

12 hours

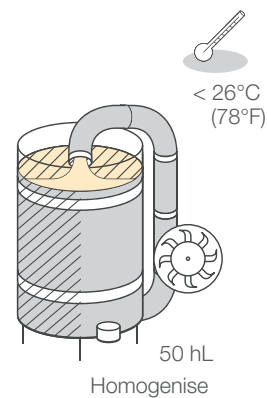

Find Out More

Discover our **RESTARTING MALOLACTIC FERMENTATION (MLF)** protocol on our website, at **LAFFORT & YOU** section.



LAFFORT

l'œnologie par nature